





FEMALE ADAPTER INTERCHANGE SPECIFICATIONS



PALADIN HEAVY CONSTRUCTION

Due to the many different sizes of loaders and the loader spacings, it has been necessary to develop various interchanges of female adapters on our attachments. This means that not all couplers will pick up all attachments.

The JRB series of an attachment can be determined by measuring the rib spacing, rib thickness and the hook to hole dimension and comparing with the chart below.

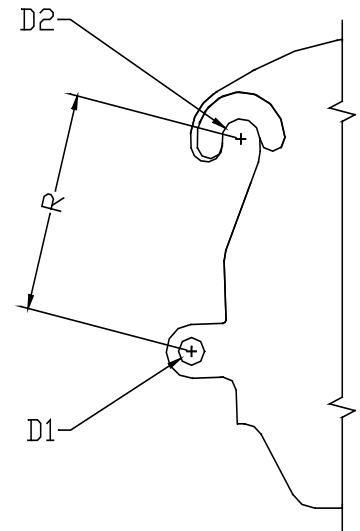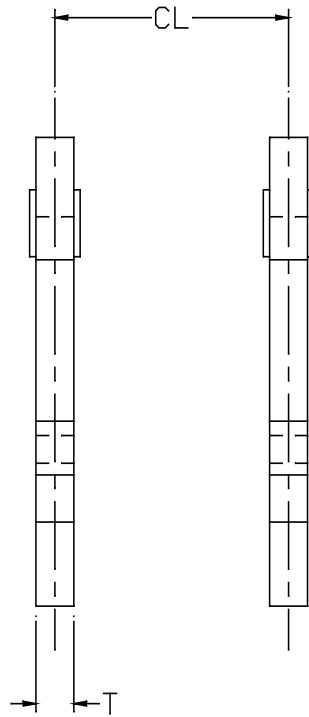

CLASS	SERIES	T	R	D1	D2	CL
Backhoe	84	1.50	13.00	1.56	2.03	24.38
Backhoe	580	1.50	17.32	1.56	2.03	31.38
Backhoe	DEERE E	1.00	20.33	1.71	2.62	38.20
Backhoe	KOM. WB	1.50	17.67	1.81	2.03	29.38
200/300/500	416	1.50	16.27	2.06	3.03	30.62
Non-Current	417	1.50	20.67	2.06	3.03	26.97
600	418	1.50	20.67	2.06	3.03	32.75
700/800	420	2.00	21.12	2.06	4.03	29.00
Non-Current	D	1.50	21.68	2.06	2.28	27.38
Non-Current	FR	1.50	26.25	2.06	3.03	32.50
Non-Current	G	1.50	16.27	2.06	3.03	25.40
Cat	IT28	1.50	19.93	2.00	2.48	22.44
Cat	IT38	1.50	22.79	2.06	3.09	36.25
300/500/600	VOL120	1.50	24.26	1.98	2.42	39.36
	BALD1	5.00	22.75	1.50	4.00	26.50
200/300/500	BALD2	5.00	21.00	2.00	4.00	20.75
600/700	BALD3	5.00	20.60	2.00	5.00	23.50
800/900	BALD4	6.00	30.25	2.36	6.00	59.50
100	304	1.25	12.34	1.57	1.58	34.88
700/800	VOL150	2.00	30.69	2.97	3.25	41.38

Note: All dimensions are in inches.

Other interchanges exist by particular machine model. It is recommended to contact JRB, with the serial number of both the coupler and attachments with questions about interchanges.